




Montageanleitung / Montážny návod










Programm/Program

STEP

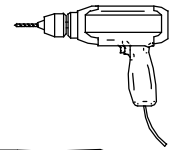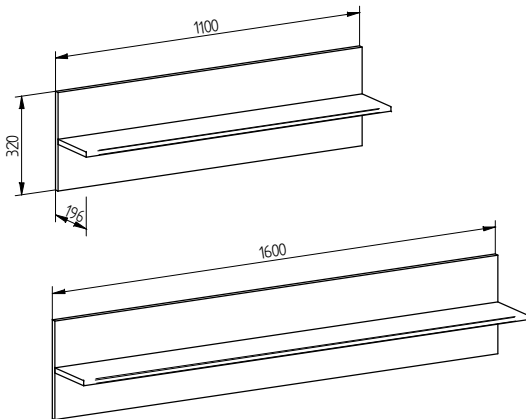
Type/Typ 08,09

MN 148/08




1		ø35 x2/3
2		ø6,3x11 x4/6
3		ø8x35 x3/6
4		ø7x50 x4/5
5		ø5x50 x2/3
6	 	ø10x50 x2/3 *NICHT BEINHALTET IM BESCHLAGBEUTEL! *NIE JE SÚČASŤOU KOVANIA!
7		ø3,5x15 x6/6
8		ø12 x6/6


SERVISKARTE / SERVISNÁ KARTA

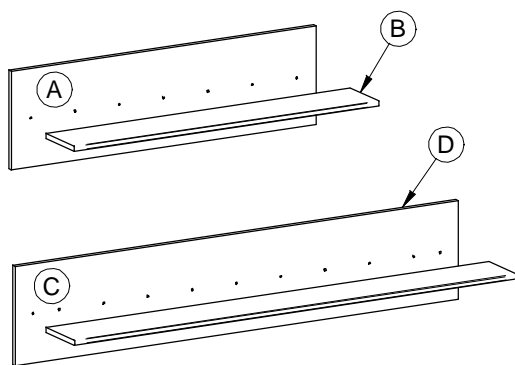


1

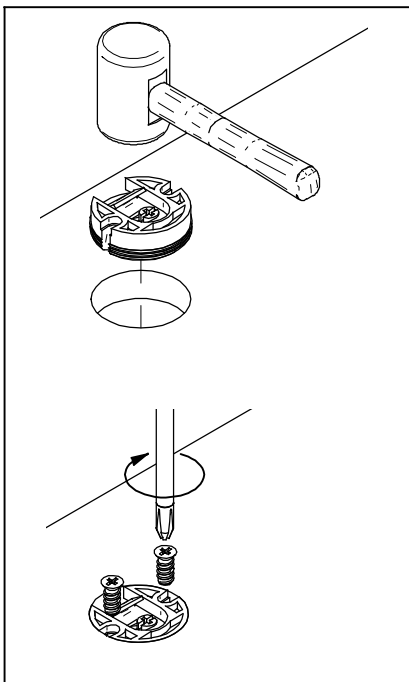


(1+2)

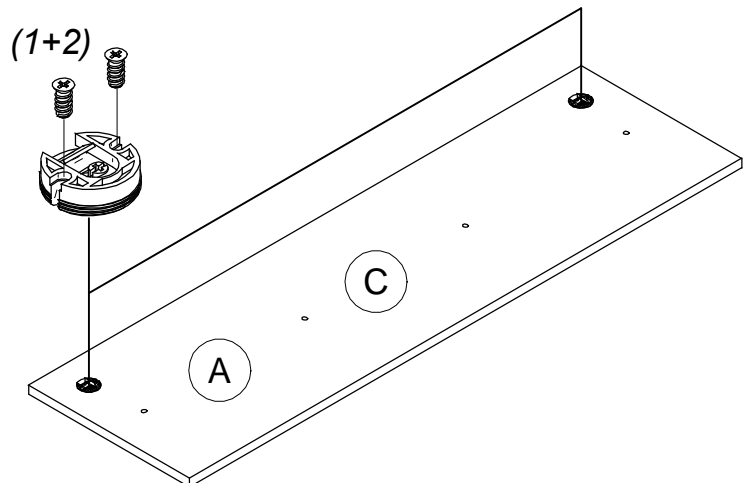


2

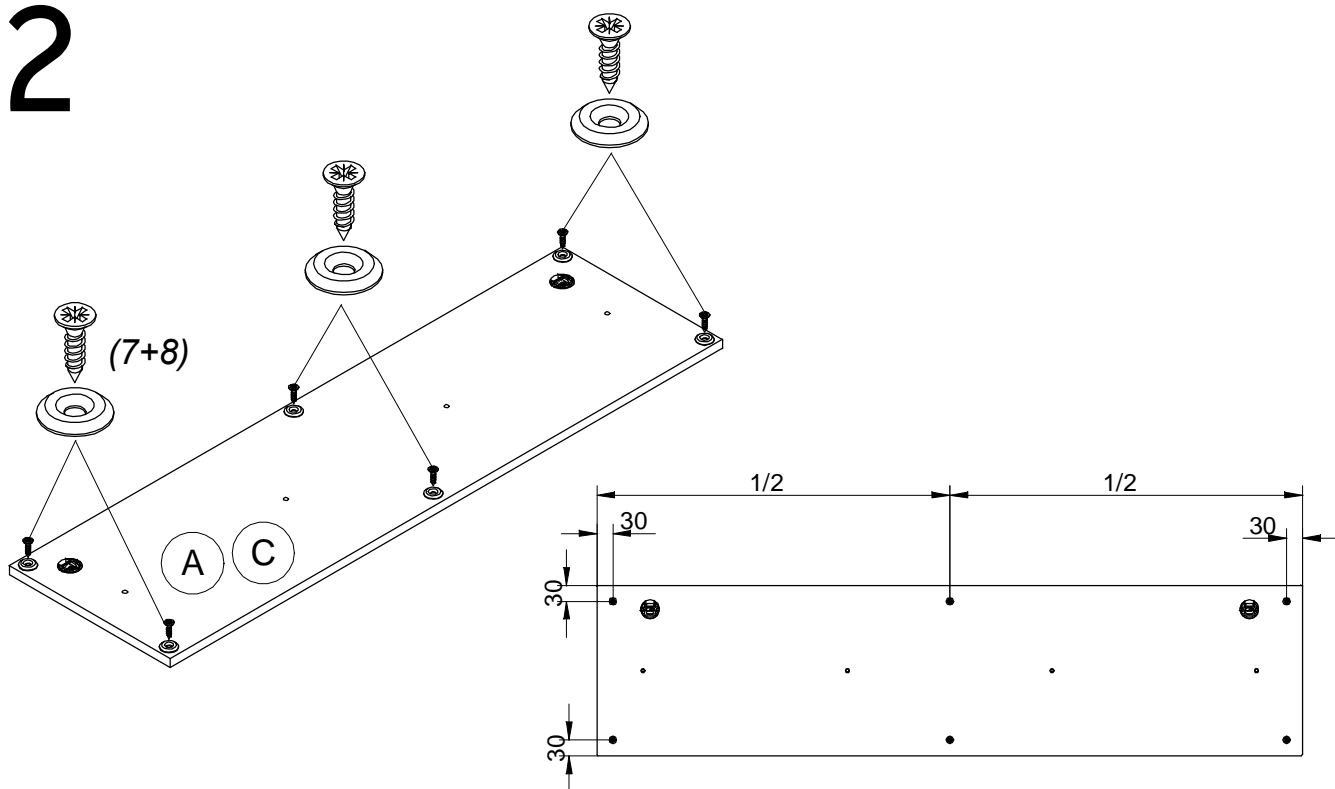

3

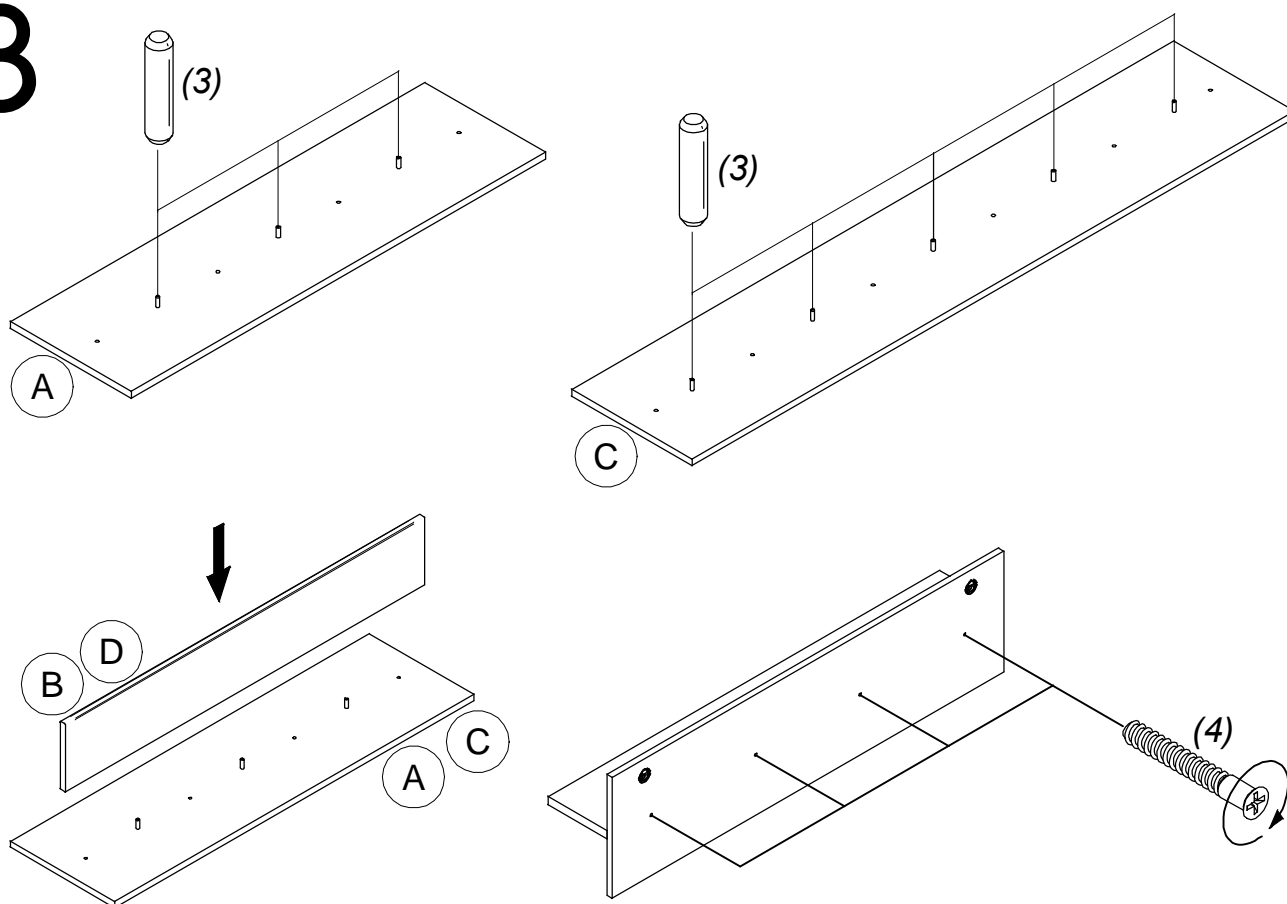




Achtung! Bitte nur Schraubenzieher zu verwenden, keinen Akkuschauber!
Pozor! Prosím skrutkujte manuálne, nie akuskrutkovačom.




4

<p>I.</p> <p>$\varnothing 10$</p> <p>$h > 60\text{mm}$</p>	<p>II.</p> <p>(6*)</p>
<p>III.</p> <p>(5)</p>	<p>IV.</p> <p>max.5mm</p>
<p>*Befestigungsdübel ist kein Bestandteil der Verpackung. Es ist nötig, einen geeigneten Dübel zu wählen, je nach der Tragfähigkeit und Zusammensetzung der Mauer, an die Schränke gehängt werden. Falls Sie sich nicht sicher sind, welcher Typ von Dübel Sie brauchen, nehmen Sie Kontakt mit dem nächsten Fachhandel auf.</p> <p>*Upevňovacia hmoždinka nie je súčasťou balenia. Je nutné, zvoliť vhodnú hmoždinku vzhľadom na nosnosť a typ steny, na ktorú nábytok vešíate. Ak nie ste si istý, aký druh hmoždinky potrebujete, kontaktujte najbližšie železiarstvo.</p>	


V.

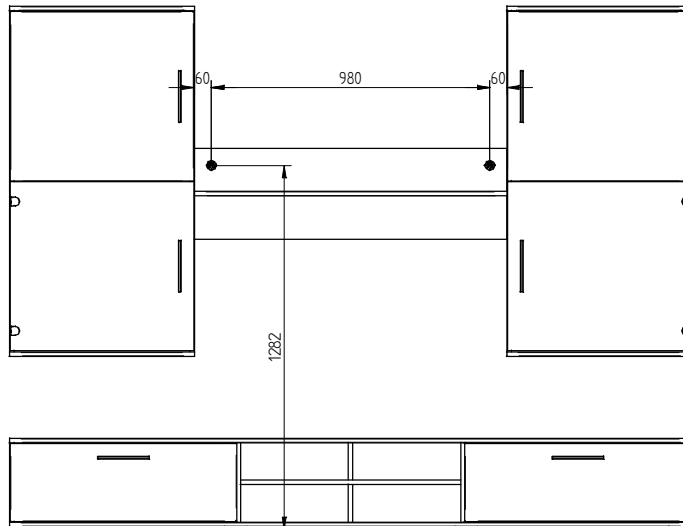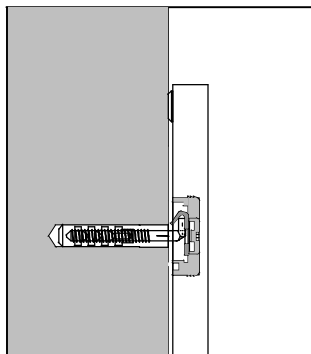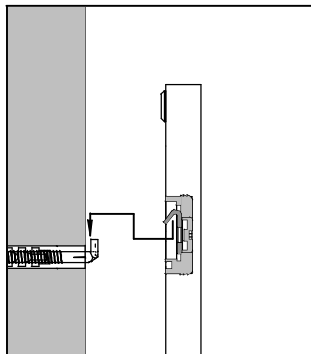



Kombi 01

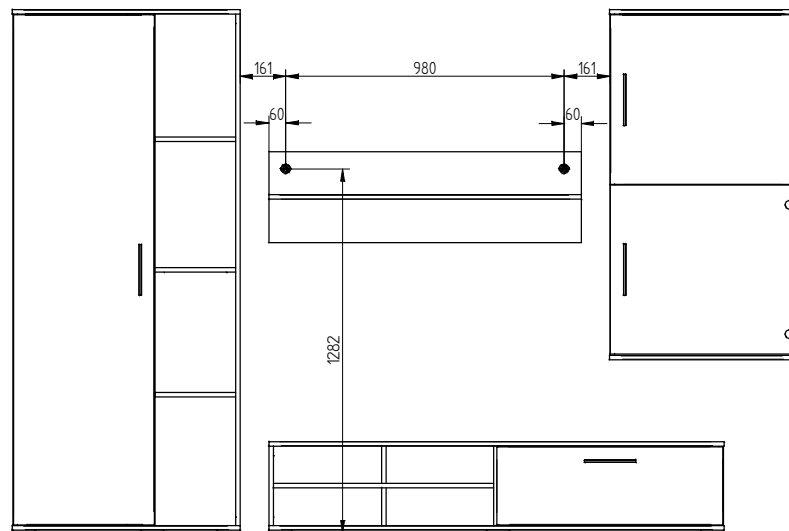

Kombi 03, 05

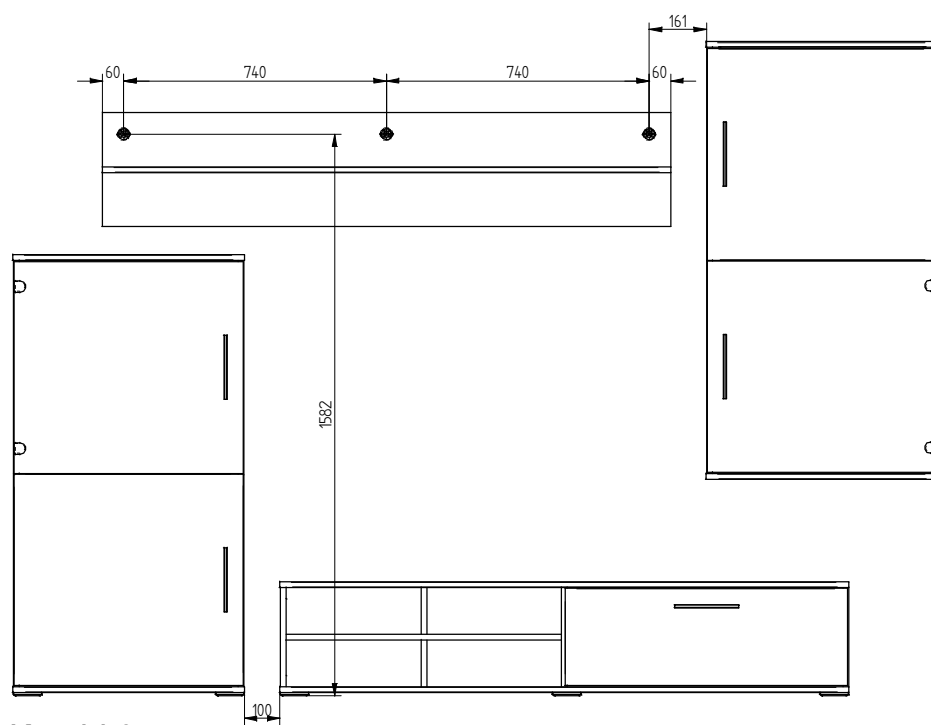

Kombi 04

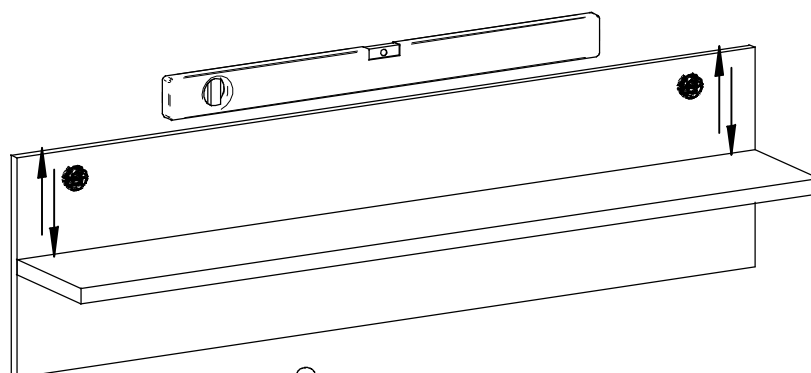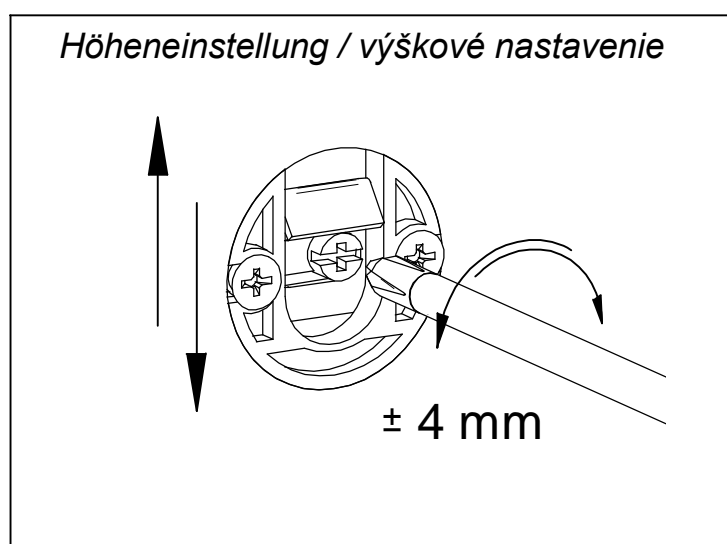

 max. 3kg