




www.MLMEBLE.pl

GB D CZ SK RUS LT  
assembly instructions / montageanleitung / montážní návod / montážny návod / инструкции по монтажу / surinkimo instrukcija



# INSTRUKCJA MONTAŻU


**MODERN 15N/16N**  
 ▲91 ➔ 206 ➔ 146/166

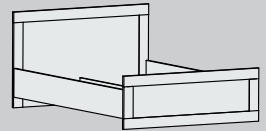

akcesoria / accessories / zubehör / příslušenství / príslušenstvo / аксессуары / furnitūra :

x 11  KK 8/32	x 6  KT 6,3/50	x 16  ZA N 20	x 21  ZMD	x 8  SG 8/8	x 8  MD2 L76	x 37  BMD	x 4  KTL	x 32  WE 6,3x13	x 1  kluczyk / key / schlüssel / klíč / Klūč / ключ / raktas	x 1  klej / glue / kleber / lepidlo / lepidlo / клеј / klĳai
x 1  PK 25	x 2  WT 3,5x16									

**do montažu potrebne są:**  
 are needed for assembly:  
 sind erforderlich für die montage:  
 jsou potřebné pro montáž:  
 sú potrebné pre montáž:  
 которые необходимы для сборки:  
 Surinkimui reikės:

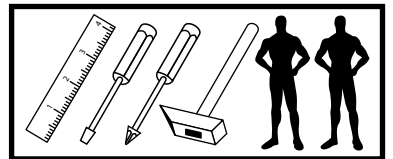

**UWAGA !** - w pierwszej kolejności wbijamy akcesoria „KK” i „MD” w blaty oraz boki.  
**WARNING!** - The first accessory sticks "KK" and "MD" in the tops and sides.  
**WARNUNG!** - Die erste Accessoire-Sticks "KK" und "MD" in den Spitzen und an den Seiten.  
**POZOR!** - První příslušenství holí "KK" a "MD" v korunách a boky.  
**POZOR!** - Prvé príslušenstvo palíc "KK" a "MD" v korunách a boky.  
**ВНИМАНИЕ!** - Первый аксессуаров палочки "KK" и "MD" по вершинам и по бокам.  
**DĚMESIO!** - Pirmiausiai furnitūrą KK ir MD įkalame į stalviršį ir šonus.

Nr/No	Szt/Qty
1	1
2	1
3	8
4	1
5	1
6	1

